


CORROSION PROTECTION KIT FOR 4GG MOTOR


INSTALLATION INSTRUCTIONS



1. Turn upside down the motor, putting it in vertical or tilted position. Be careful to NOT balance the motor by the top shaft.

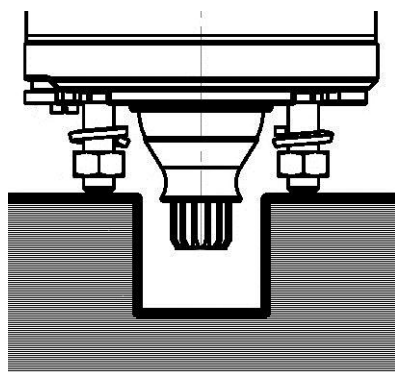


OK

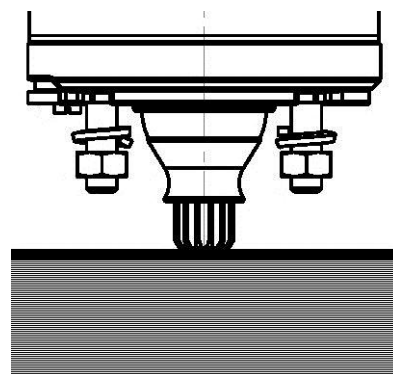

NO

2. Remove the standard screws without moving the lower end bell.
3. Put the corrosion protection disc and fix it with the screws supplied in the kit.

2000/3000 N

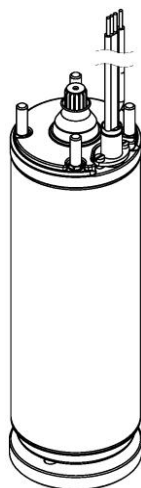

6000 N



KIT ANTICORROSIONE SOLO PER MOTORI 4GG

MOTORI MONOFASE				
	P2		Spinta assiale	Codice kit anticorrosione
	[HP]	[kW]	[N]	
50Hz	0,5	0,37	2000	60123038
	0,75	0,55	2000	60123038
	1	0,75	2000	60123038
	1,5	1,1	2000	60123038
	2	1,5	3000	60123038
	3	2,2	3000	60123038
	5	3,7	6000	60123039
MOTORI TRIFASE				
	P2		Spinta assiale	Codice kit anticorrosione
	[HP]	[kW]	[N]	
50Hz	0,5	0,37	2000	60123038
	0,75	0,55	2000	60123038
	1	0,75	2000	60123038
	1,5	1,1	2000	60123038
	2	1,5	3000	60123038
	3	2,2	3000	60123038
	4	3	6000	60123039
	5,5	4	6000	60123039
	7,5	5,5	6000	60123039
	10	7,5	6000	60123039

60123038 = CODE DAB 870195

60122039 = CODE DAB 870196

KIT DI PROTEZIONE CONTRO LA CORROSIONE PER MOTORE 4" - CORROSION PROTECTION KIT FOR 4" MOTOR - KIT DE PROTECCIÓN CONTRA LA CORROSIÓN PARA MOTOR 4"

